

新製品 NEWS

TR3880/TR4580/TR5580



# Easy collection from all corners of the field

Adjustable working width for various conditions







Tail lamps and firearms as standard equipment





#### Adjustable working width


Working width can be adjustable depending on the working width and amount of grass.

XTR3880/TR4580:5 Levels TR5580:3 Levels

TR3880: 325cm, 340cm, 350cm, 365cm, 380cm

TR4580: 390cm, 400cm, 420cm, 430cm, 455cm

TR5580: 510cm, 530cm, 550cm

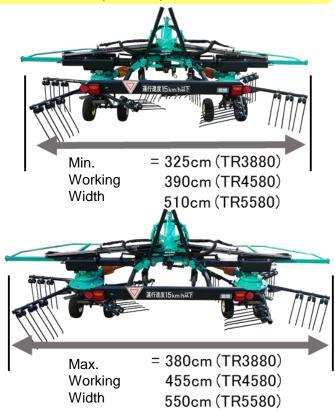

### 3D cam improved collection performance

3D cam reduces vibration and noise and Smooth movement improves weed collection



## **Option: Electric lock release attachment**

Control box operation allows arm opening/closing to be unlocked.



#### **Free Swing Mechanism**

Easy to follow on uneven surfaces of the field and when turning, it is also easy to work around corners.



#### Adjustable working height

By replacing the pin position, the working height can be adjusted to 11 levels according to field conditions. XTR5580 18 Levels



#### **Compactness when moving**

Hydraulic system to compact the arms when moving. The automatic lock prevents shaking during transportation.



■Specifications			
Model Name	TR3880	TR4580	TR5580
Working Width (cm)	325 <sup>-</sup> 380	390~455	510~550
Machine Size When Working(L×W×H) (mm)	2,290x3,250 <sup>-</sup> 4,060x1,500	2,685x4,230 <sup>-</sup> 4,870x1,600	3,120x5,290 <sup>-</sup> 5,700x1,360
Machine Size When Moving(L×W×H) (mm)	2,420x2,140x2,370	2,805x2,320x2,725	3,280x2,490x3,000
Machine Weight (kg)	485	585	690
Tire Size	13x5.0 6PR	15x6.5-8 4PR	15x6.5-8 4PR
Rotor Number	2		
Tine arm Number (/rotor)	5.0	6	7
Tine arm Number (/arm)	3		
Suitable Tractor Power (kW{HP})	25.7 <sup>-</sup> 58.8 {35 <sup>-</sup> 80}	36.8 <sup>-</sup> 73.6 {50 <sup>-</sup> 100}	51.5 <sup>-</sup> 88.3 {70 <sup>-</sup> 120}
Suitable Tractor Weight (kg)	1,900 up	2,200 up	3,000 up
Tractor Connecting Type	3P Direct Linkage (Category I/II)		3P Direct Linkage (Category II)
Working Speed (km/h)	3~7		5-8
Working Efficiency (min./10a)	3~7	4~8	2~3

\*Weight is before universal joint is attached.

\*Specifications and pictures are subject to change without notice for machine improvement.

※仕様・写真は、改良のため予告なく変更することがあります。



安全作業

農業機械は取り扱い説明書をよく読み正しい操作を心がけましょう。 農業機械の使用前後には点検・整備を心がけましょう。

QRコードからもタカキタの ホームページにアクセス できます。



製品のご相談は・・・

工場/〒518-0441 三重県名張市夏見2828番地 TEL 0595(63)3111(代) FAX 0595(64)0857 札 幌 工 場/〒007-0882 札幌市東区北丘珠2条3丁目1番20号 TEL.011(781)1111(代) FAX.011(781)1113 業 所/札幌・豊富・北見・中標津・帯広・東北・南東北・関東・関西・中国・九州・南九州 URL: http://www.takakita-net.co.ip